

MAINTENANCE & TROUBLESHOOTING

Cleaning: Use mild soap and water only. Avoid high-pressure spray directly at the lens or seals from a distance closer than 12 inches (30cm).

Flickering: Check for loose ground connections or a low battery charge.

Condensation: Small amounts of moisture inside the lens are normal due to temperature changes and will dissipate through the integrated breather.

SUPPORT & WARRANTY

Warranty: For product warranty please refer to our website www.primelux.com

Contact: support@primelux.com



Primelux | Power to Illuminate
www.primelux.com

© Primelux. All rights reserved.

Ref: 20260401

PRIMELUX®

PX2560

INSTALLATION GUIDE



PLEASE READ THIS GUIDE CAREFULLY BEFORE USING AND RETAIN FOR FUTURE REFERENCE

SAFETY INFORMATION

WARNING: READ BEFORE STARTING

Failure to follow these instructions may result in personal injury or damage to your vehicle's electrical system.

DISCONNECT POWER: Always disconnect the negative battery terminal before starting any electrical work.

VOLTAGE: Operate within 10-30V DC only.

EYE SAFETY: Do not stare directly into the light beam. Temporary or permanent eye damage may occur.

HEAT: Housing can reach high temperatures during operation; allow to cool before touching.

Mounting: Ensure the mounting surface is capable of supporting the unit's weight.

PACKAGE CONTENTS

- 2 x PX2560 LED Driving Lights
- 1 x Wiring Harness
- 2 x Clear Covers
- 2 x Amber Covers
- 2 x Black Covers
- 2 x Screws
- 2 x Nuts


MOUNTING INSTRUCTIONS

Step 1: Preparation. Identify a secure mounting location. Ensure adequate airflow around the cooling fins.

Step 2: Securing. Use the provided stainless steel hardware to fix the bracket. We recommend using both flat and lock washers for high-vibration environments.

Step 3: Aiming. Attach the light head to the bracket. Tilt to your desired angle and tighten all bolts securely. Do not over-torque.

INSTALLATION STEPS

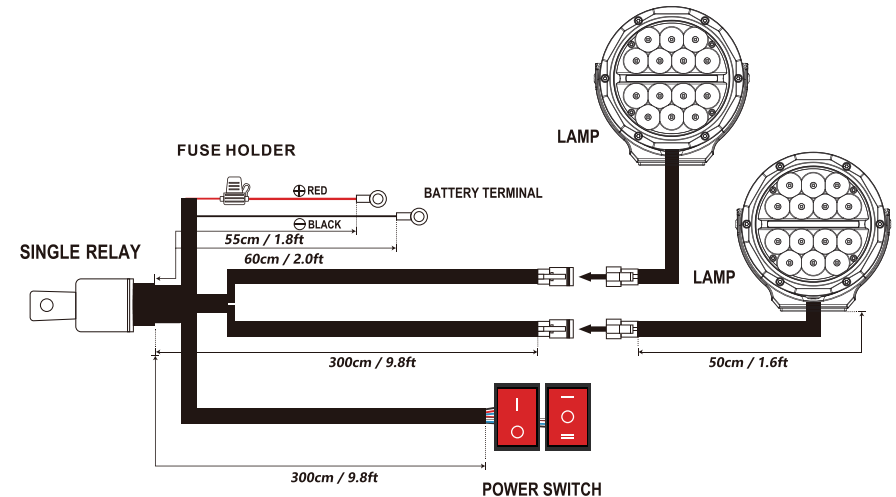

1. Connect the red wire to the positive battery terminal.
2. Connect the black wire to the negative battery terminal.
3. Connect the wiring harness connectors to the LED driving lights.
4. Route the harness away from heat sources, sharp edges, abrasive surfaces, and moving components.
5. Adjust the light beam angle as required.



Note: To use amber or black covers, simply replace them as needed.

PRODUCT SIZE

