H4 Relay Wiring Harness

Installation Instructions PWH-02H4

Package Includes

1 x Primelux H4 Relay Wiring Harness
1 x Adapter Harness Pack

Installation Steps

1. Determine the function (ground, low beam, or high beam) of each wire of your vehicle's H4 female connector.

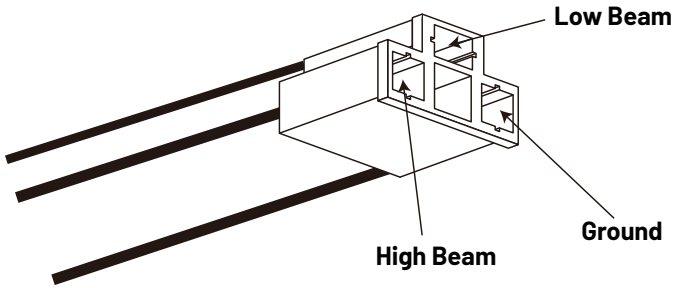

H4 Wiring-Female Connector from Your Vehicle

2. If your vehicle's wiring is compatible with the H4 wiring described above, you can set the Adapter Harness Pack aside. Instead, directly plug the Primelux wiring harness' H4 male connector into your vehicle's H4 female connector, then you can skip step 3 & 4, directly go to step 5.

3. For all other vehicle configurations, snap each wire of the adapter harness (B) into its corresponding position in the plastic adapter block (A) to align with your vehicle's wiring. Please refer to the wire color code for the adapter harness below:

Adapter Harness Pack

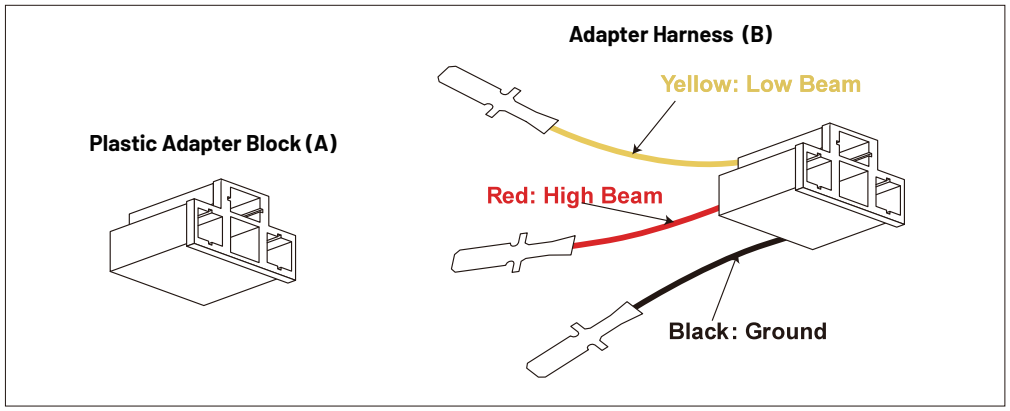

4. You can now use the adapter to plug the Primelux wiring harness's H4 male connector into your vehicle's H4 female connector.

5. Connect the 2 x H4 female connectors on the Primelux wiring harness to your H4 headlamps. Then, connect the red & black M8 ring terminals of the Primelux wiring harness to your vehicle's battery terminal's positive & negative studs to finish the installation. Please refer to the wiring diagram provided below:

Wiring Diagram

